



Warning!

NTSC Countries only

The Naxos monitors are set on PAL mode as default mode.
Please follow the next few steps to change the products video setting on NTSC mode.

Select the "Setup", ⇒ "Service", ⇒  icon from the main screen of the Naxos terminal and press the button "PAL -> NTSC" to switch from PAL to NTSC.

PAL Standard video 50 Hz (European countries)

NTSC Standard video 60 Hz

For any other information refer to the video terminal's user manual.



Warning!

NTSC Countries only

The Naxos monitors are set on PAL mode as default mode.
Please follow the next few steps to change the products video setting on NTSC mode.

Select the "Setup", ⇒ "Service", ⇒  icon from the main screen of the Naxos terminal and press the button "PAL -> NTSC" to switch from PAL to NTSC.

PAL Standard video 50 Hz (European countries)

NTSC Standard video 60 Hz

For any other information refer to the video terminal's user manual.



Warning!

NTSC Countries only

The Naxos monitors are set on PAL mode as default mode.
Please follow the next few steps to change the products video setting on NTSC mode.

Select the "Setup", ⇒ "Service", ⇒  icon from the main screen of the Naxos terminal and press the button "PAL -> NTSC" to switch from PAL to NTSC.

PAL Standard video 50 Hz (European countries)

NTSC Standard video 60 Hz


For any other information refer to the video terminal's user manual.



Warning!

NTSC Countries only

The Naxos monitors are set on PAL mode as default mode.
Please follow the next few steps to change the products video setting on NTSC mode.

Select the "Setup", ⇒ "Service", ⇒  icon from the main screen of the Naxos terminal and press the button "PAL -> NTSC" to switch from PAL to NTSC.

PAL Standard video 50 Hz (European countries)

NTSC Standard video 60 Hz

For any other information refer to the video terminal's user manual.