

CHORUS

GEWISS

Configuration guide of the entryphone system City Vision on Master Ice



Summary

1	Introduction	3
2	How to obtain the activation code (license key).....	3
3	Connection diagram.....	7
4	Plant configuration	8
4.1	Plant structure.....	8
4.2	Server Voip configuration	9
4.3	Lan Interface configuration	10
4.4	Master Ice configuration	11
4.5	"Unit view" configuration	12
5	Lan interface set up	13
5.1	Connect to Lan interface GW19356	13
5.2	Setup→Information.....	13
5.3	Setup→Network Setup	14
5.4	IP estension → Master/Slave setup	14
5.5	Management→Software and config	15
6	Server voip set up	16
6.1	Connect to Server Voip GW19357	16
6.2	Management→Software and config (generate file to be sent Gewiss).....	16
6.3	Setup→Information.....	17
6.4	Setup→Network setup	17
6.5	System configuration→Master/Slave setup.....	18
6.6	Accounts	18
6.7	City Vision PABX→Accounts.....	19
6.8	Software and config	19
7	Master Ice configuration.....	20
7.1	Enter License key	20
7.2	Setting parameters	21

1 Introduction


This manual describes the steps to follow in order to setup the video entry phone function on Master Ice in a City Vision Plant.

The commissioning process consists of several stages. In order to optimize the installation phases we suggest to request in advance the activation code via mail sat@gewiss.com. Please, follow the instruction below.


2 How to obtain the activation code (license key)

The sequence of operations required to obtain the license key is described here below:

1. Retrieve the Target ID of Master Ice (Next → Setting → Entryphone)

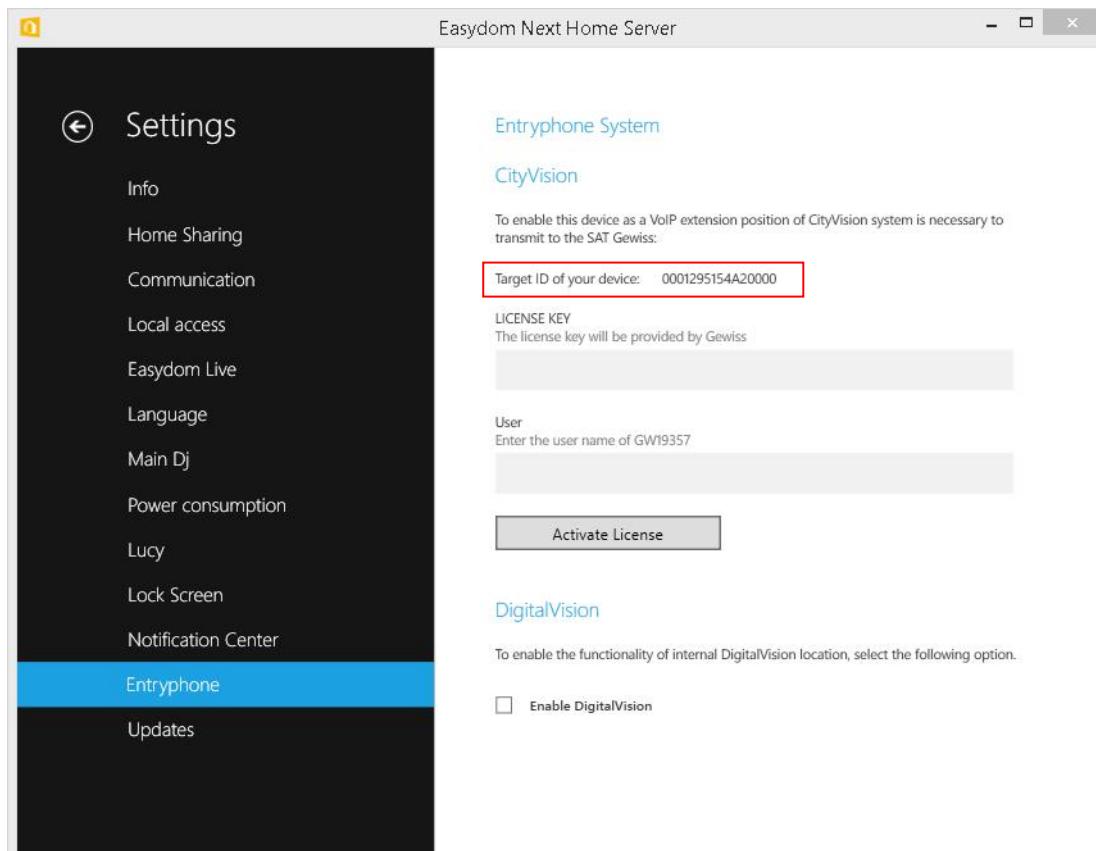

2. Retrieve the file generated by the “software e config” → License request → request present on Server Voip set up (see from page 16)

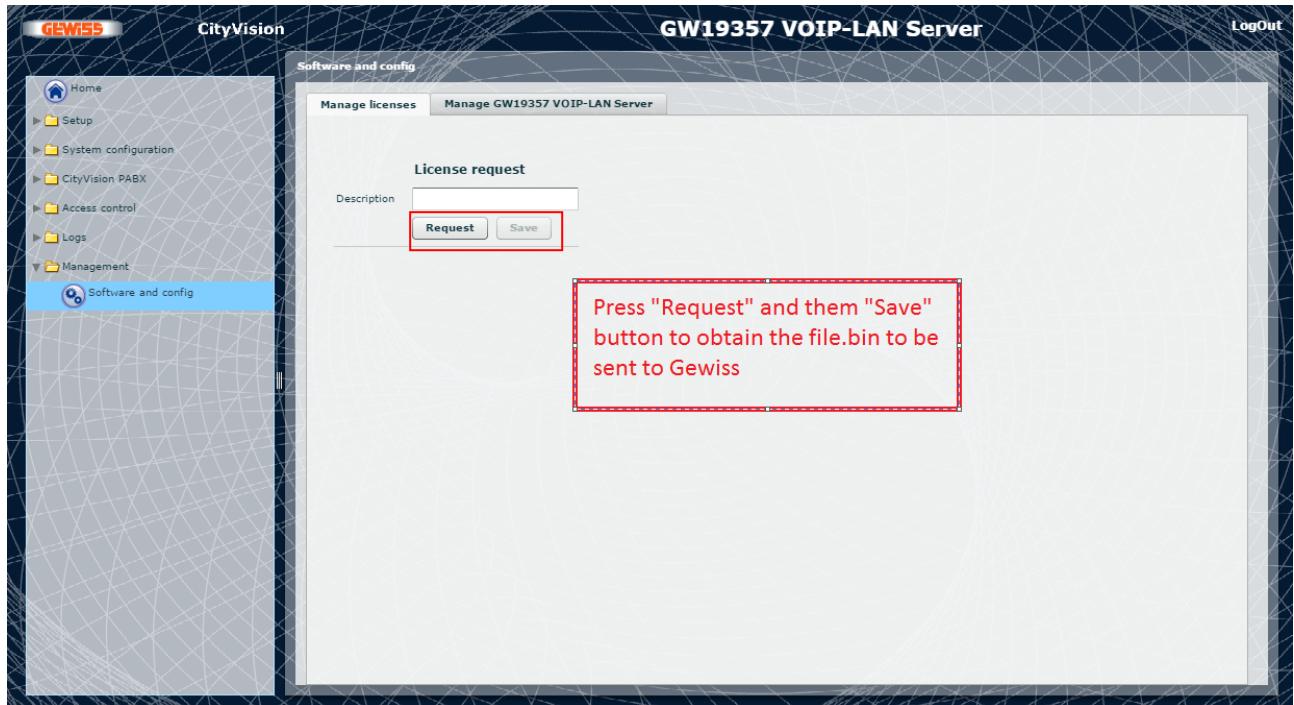

The generated files will have extension “.bin”

Send the collected information to sat@gewiss.com. Specify in the mail the description: "License key Master Ice / City Vision".

License Key Master Ice/City Vision 16-gen-2017 15.50

Da: marcoc2c@alice.it (marcoc2c@alice.it) Mostra dettagli
 A: <sat@gewiss.com>
 Allegati: 1 file [Salvali come zip](#) | BptReqLicense.bin

Good morning,
 this is to apply for a license to plant Master Ice / City Vision.
 Attached the bin file.
 the Target ID of Master ICE is:
AF9DBBC329872838ACA90E080E2FA3D3

REGARDS

Allegati presenti in questa mail

BptReqLicense.bin (312 bytes) [salva su PC](#)

The customers service Gewiss will reply attaching a file containing the License key.

I: License Key Master Ice/City Vision 16-gen-2017 15.57

Da: GW IT - Sat (sat@gewiss.com) aggiungi | blocca Mostra dettagli
 A: "marcoc2c@alice.it"<marcoc2c@alice.it>
 Allegati: 1 file [Salvali come zip](#) | GewissCityVision_Lic_server_target ID.txt


You will find here in attached the required license.
 Best regards.

Alessandra Minuti
 Segreteria Divisione DOMOTICS
DOMOTICS Division Secretary
 domodivision@gewiss.com - Int. 2562


GEWISS SPA | Via A. Volta, 1 - 24069 CENATE SOTTO BG, Italy | T. +39 035 946 111 - F. +39 035 946 130 | www.gewiss.com

| 46 QP | R-EVOLUTION

Enter the license key in Next page: *Settings→Entryphone→LICENSE KEY*

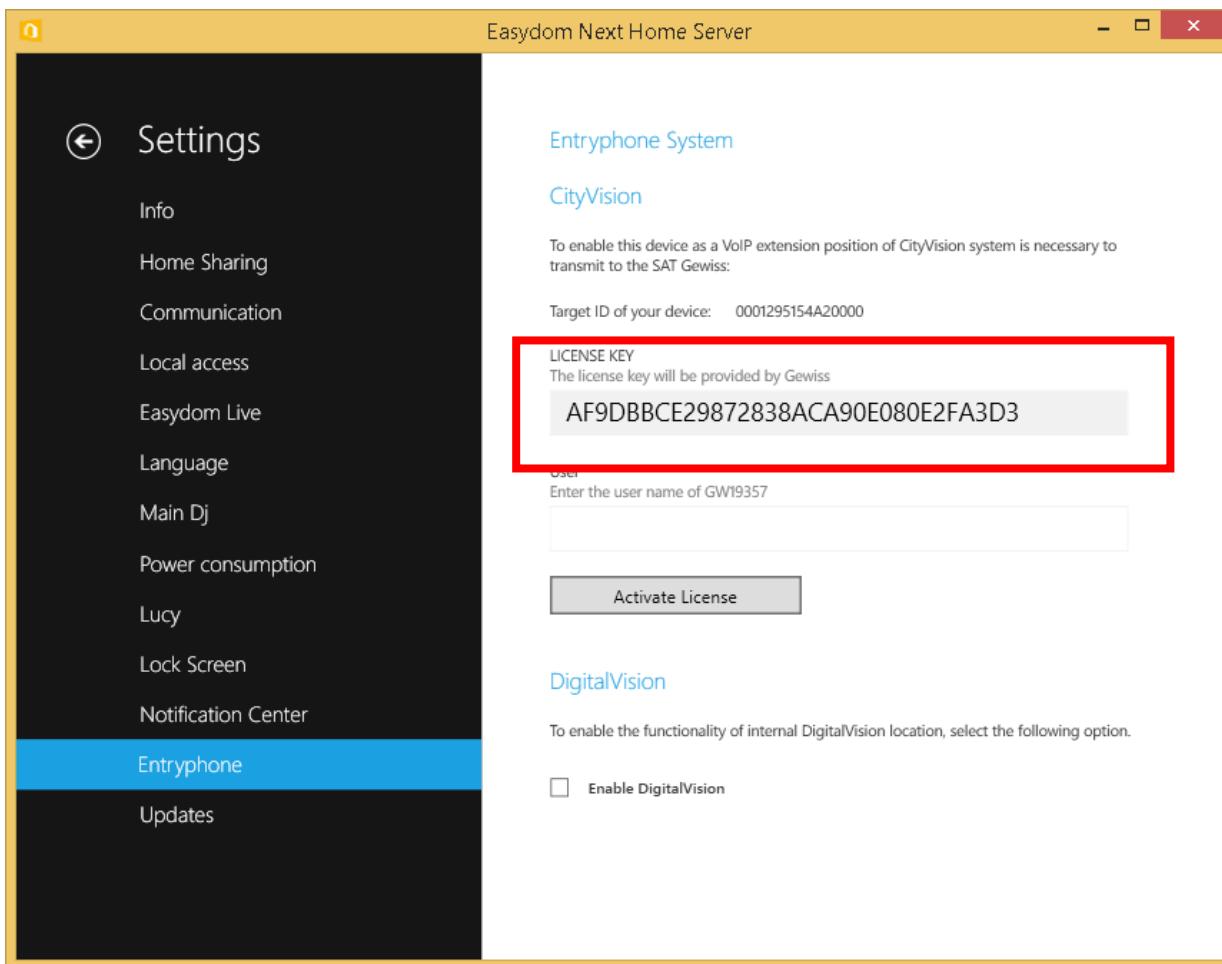


And also on Server Voip page: *City Vision PABX→Credenziali→licenza*

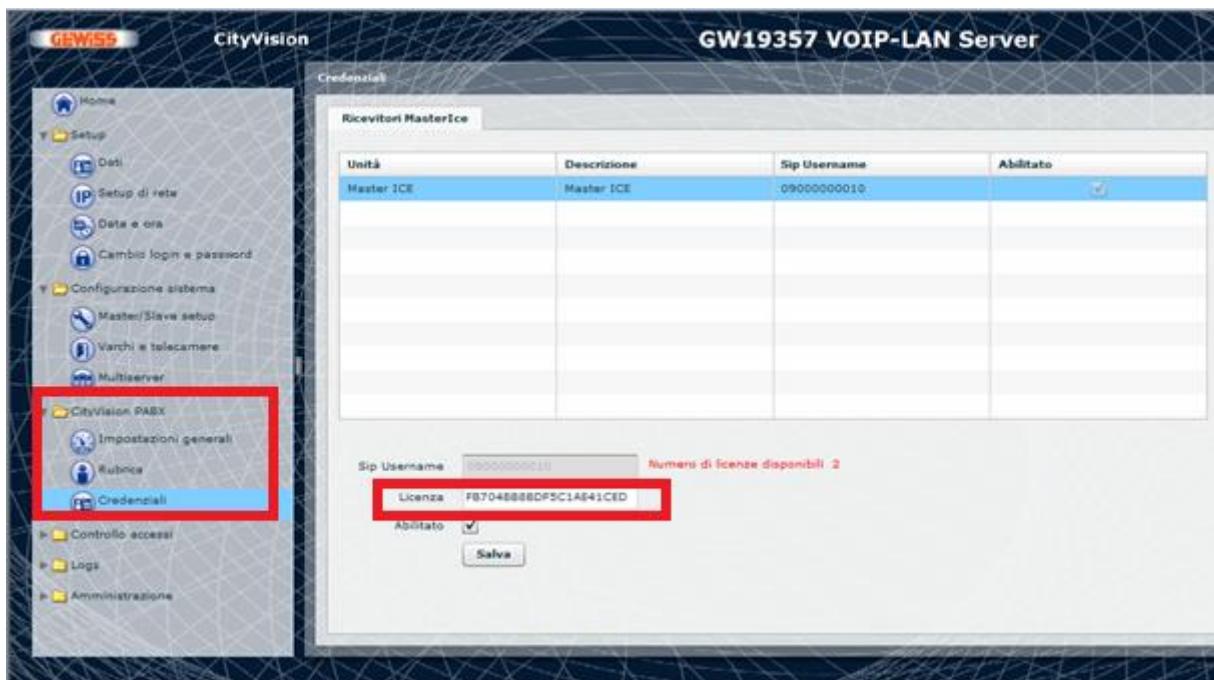

For a complete configuration follow the instructions in the following paragraphs


3 Connection diagram

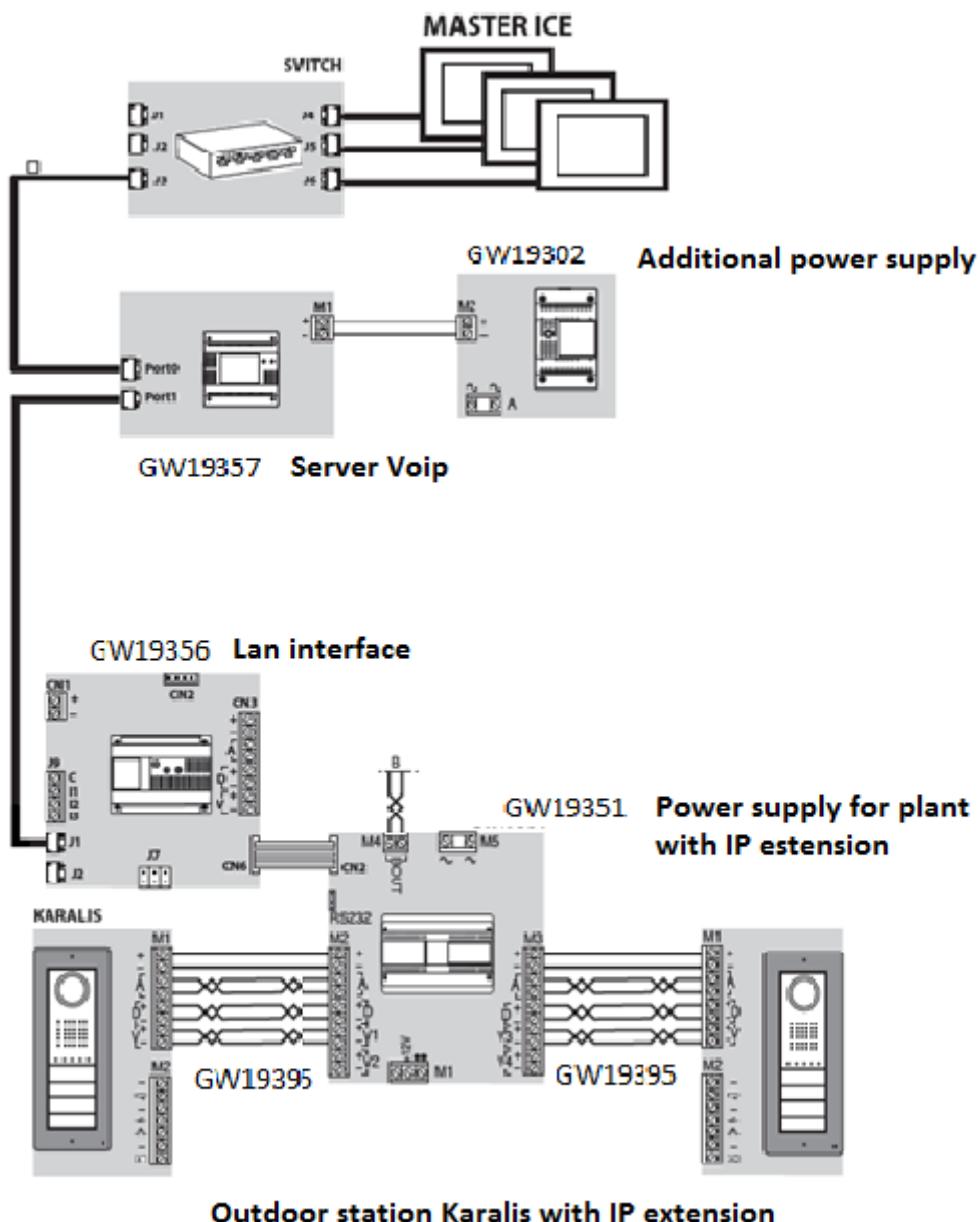


4 Plant configuration

System programming must be performed using the programming software “City Vision” (GW19373).


4.1 Plant structure

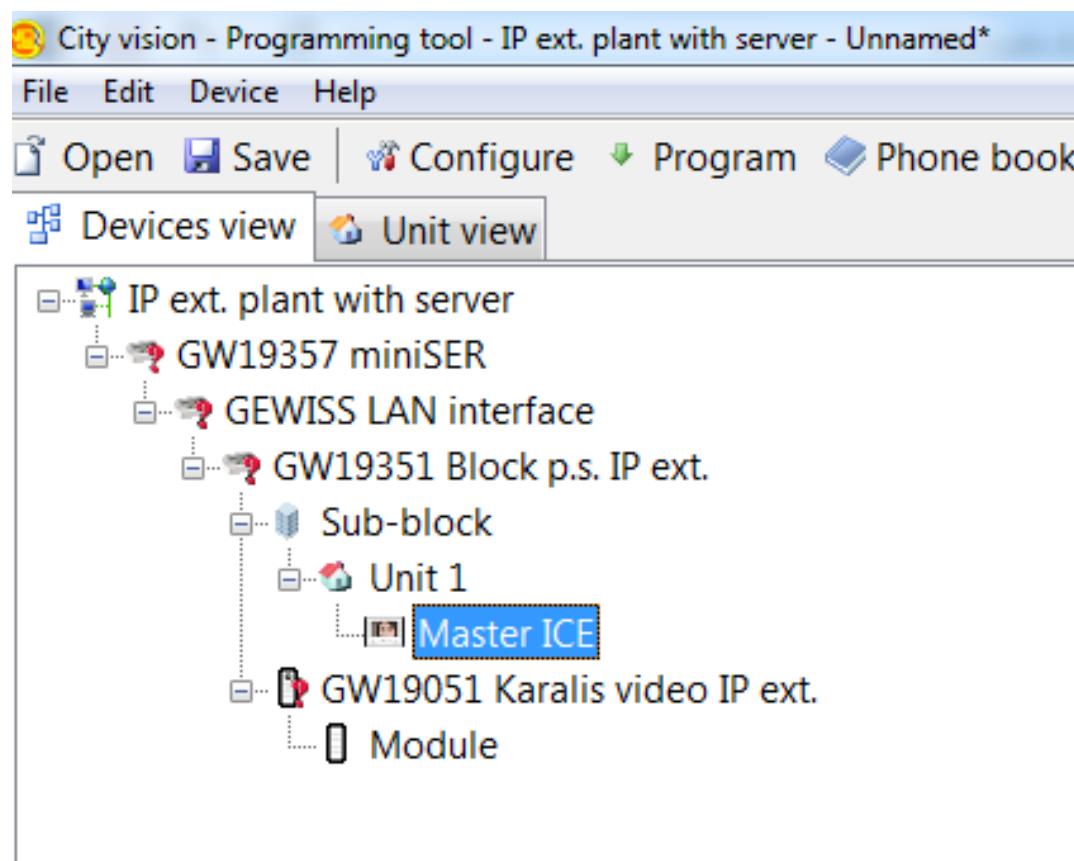


4.2 Server Voip configuration

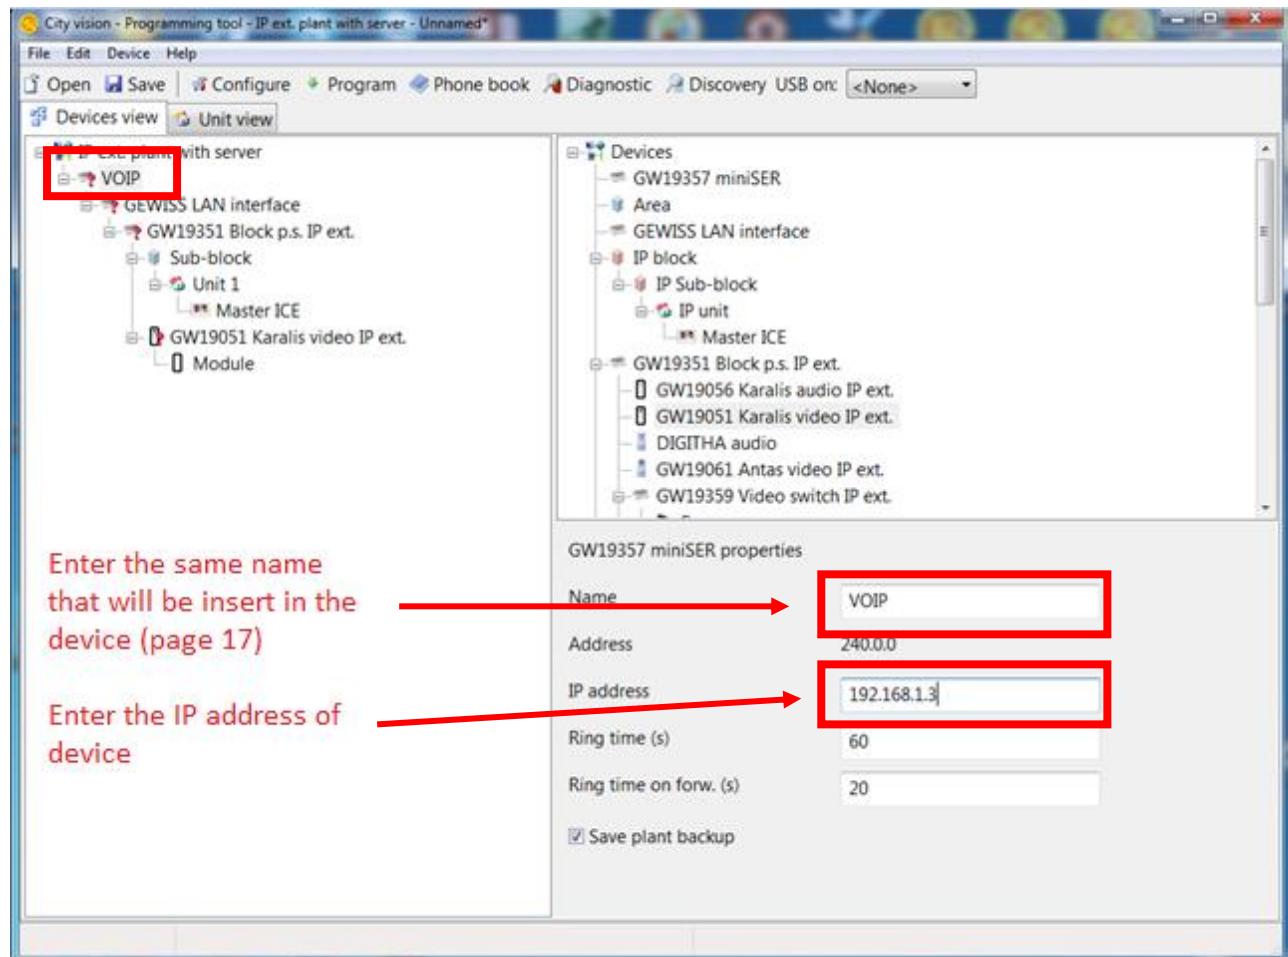

4.3 Lan Interface configuration

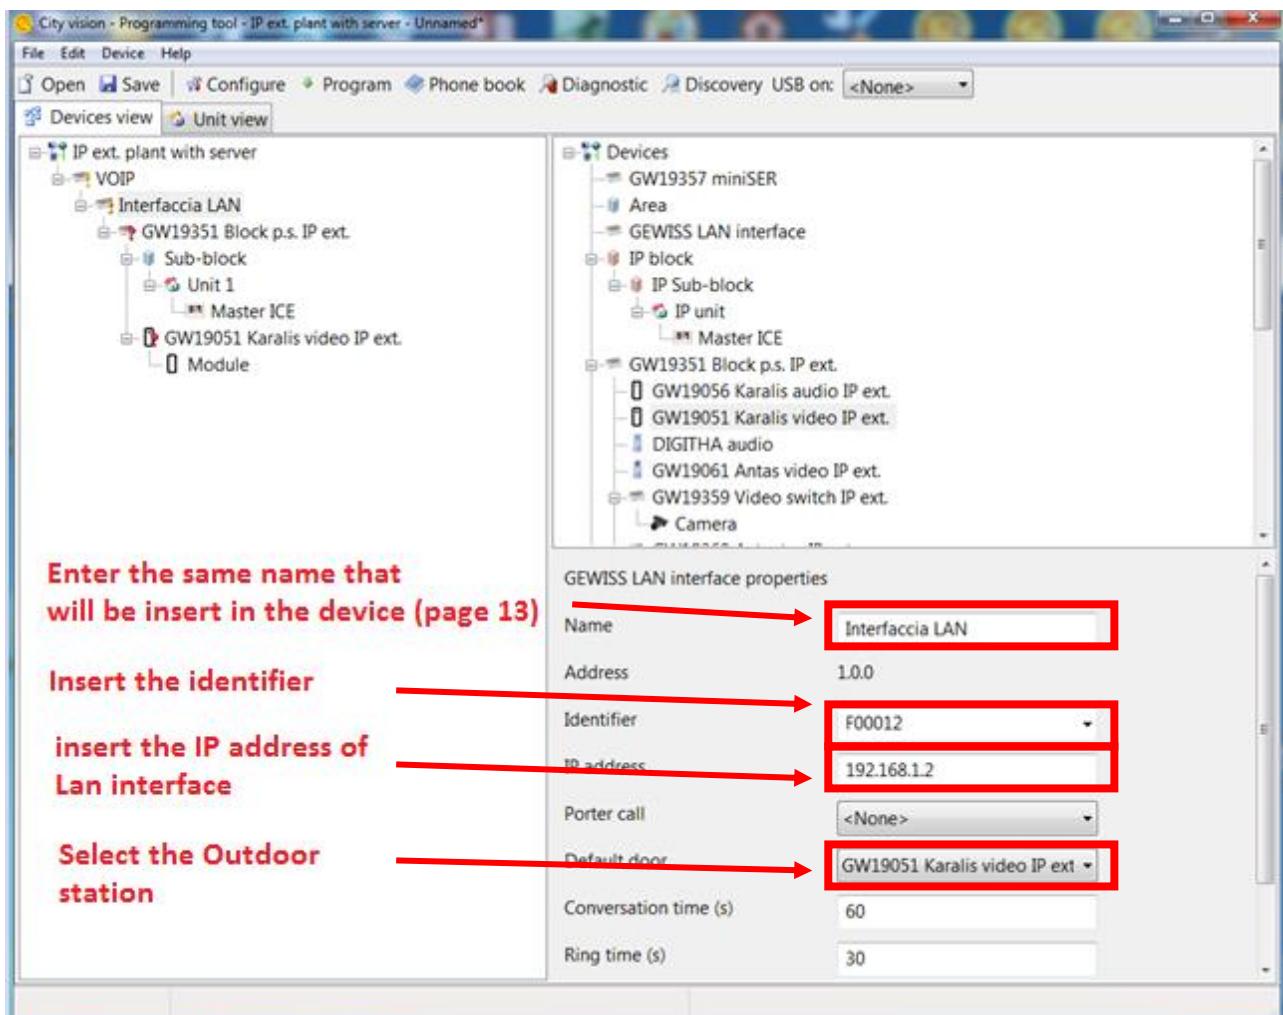


4.4 Master Ice configuration

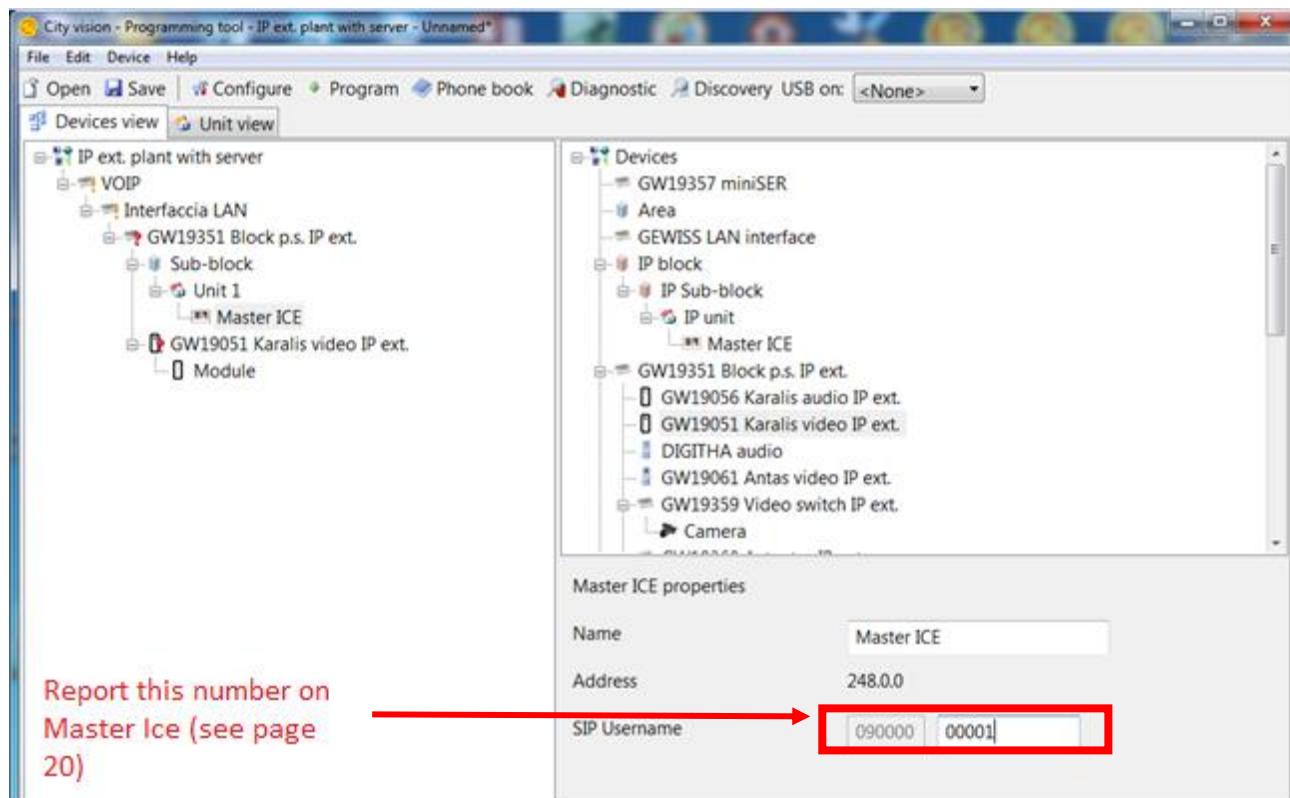

4.5 “Unit view” configuration

In order to enable calls follow the following steps:


- Select “Unit view”
- Select outdoor panel (GW19051)
- Select the system “IP ext. Plant with server” (upper right) and drag above the outdoor panel (GW19051) in the box below right.

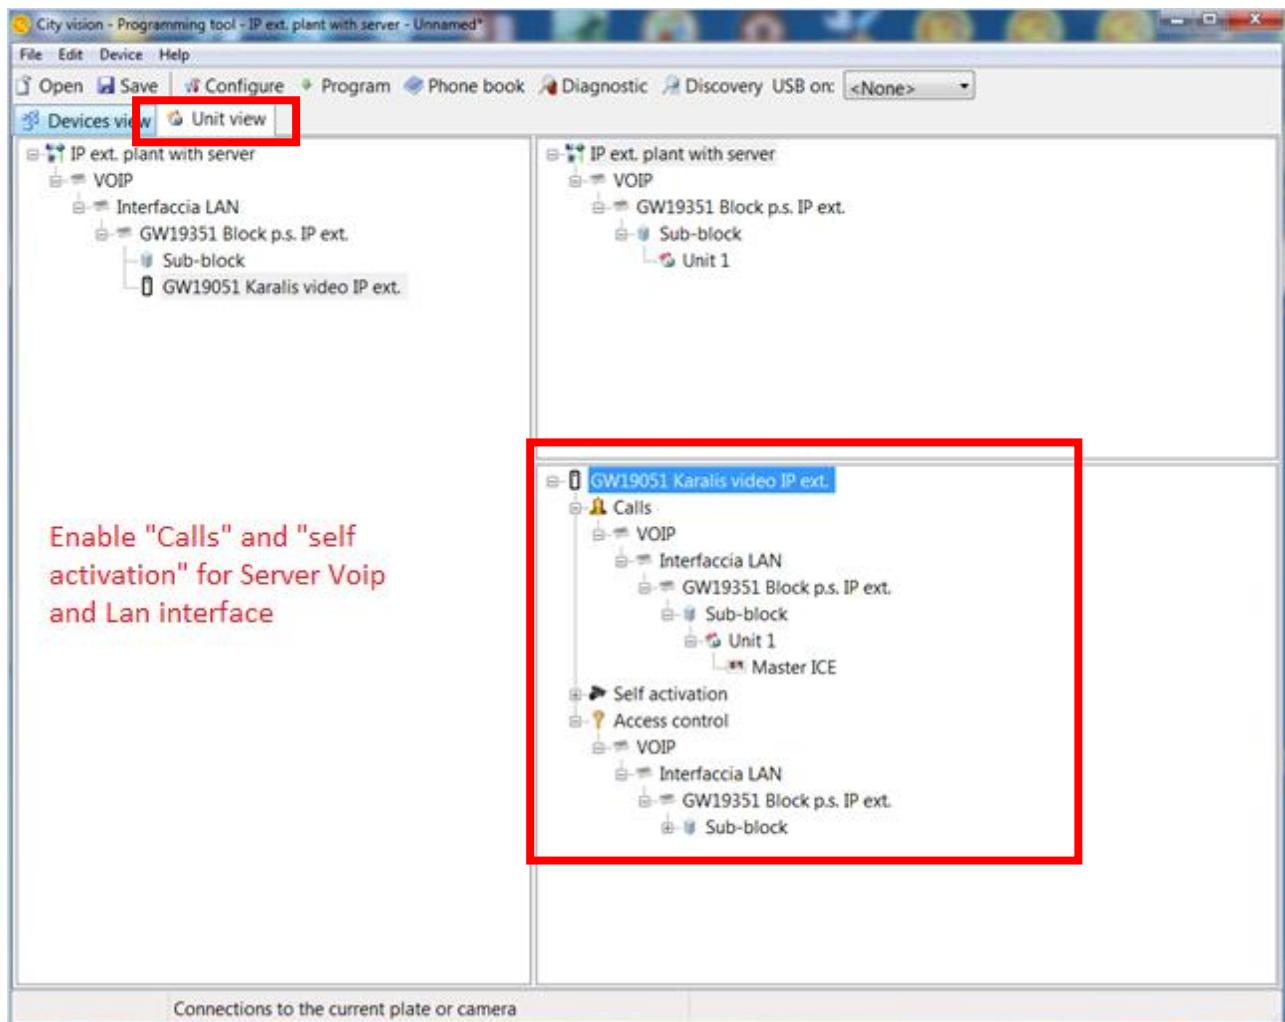


Complete programming and press the "Program" button.

5 Lan interface set up


5.1 Connect to Lan interface GW19356

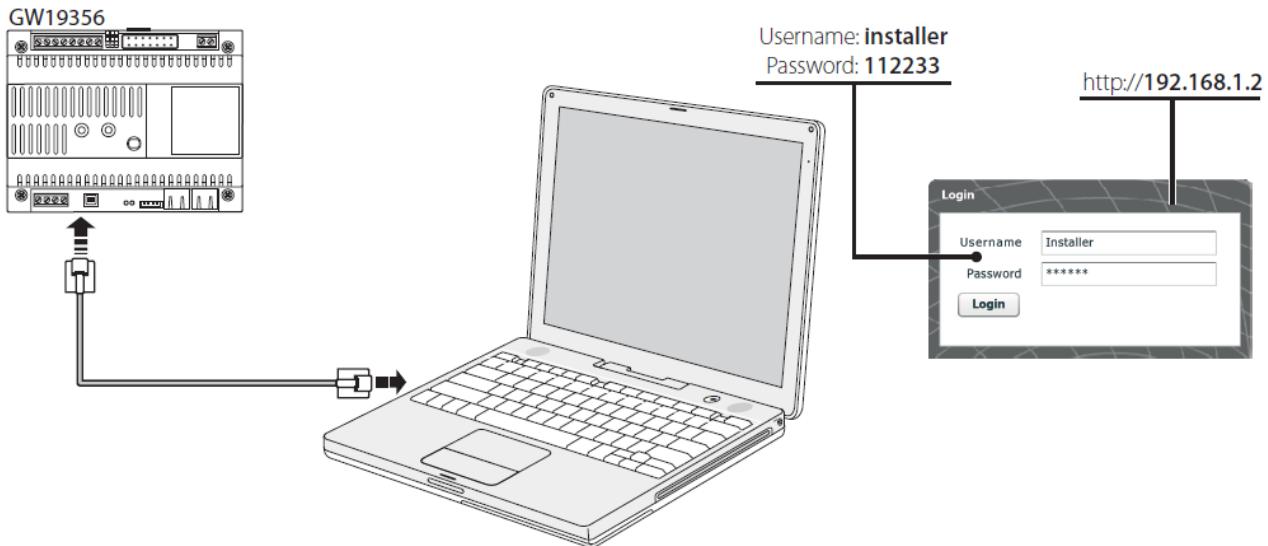


5.2 Setup→Information

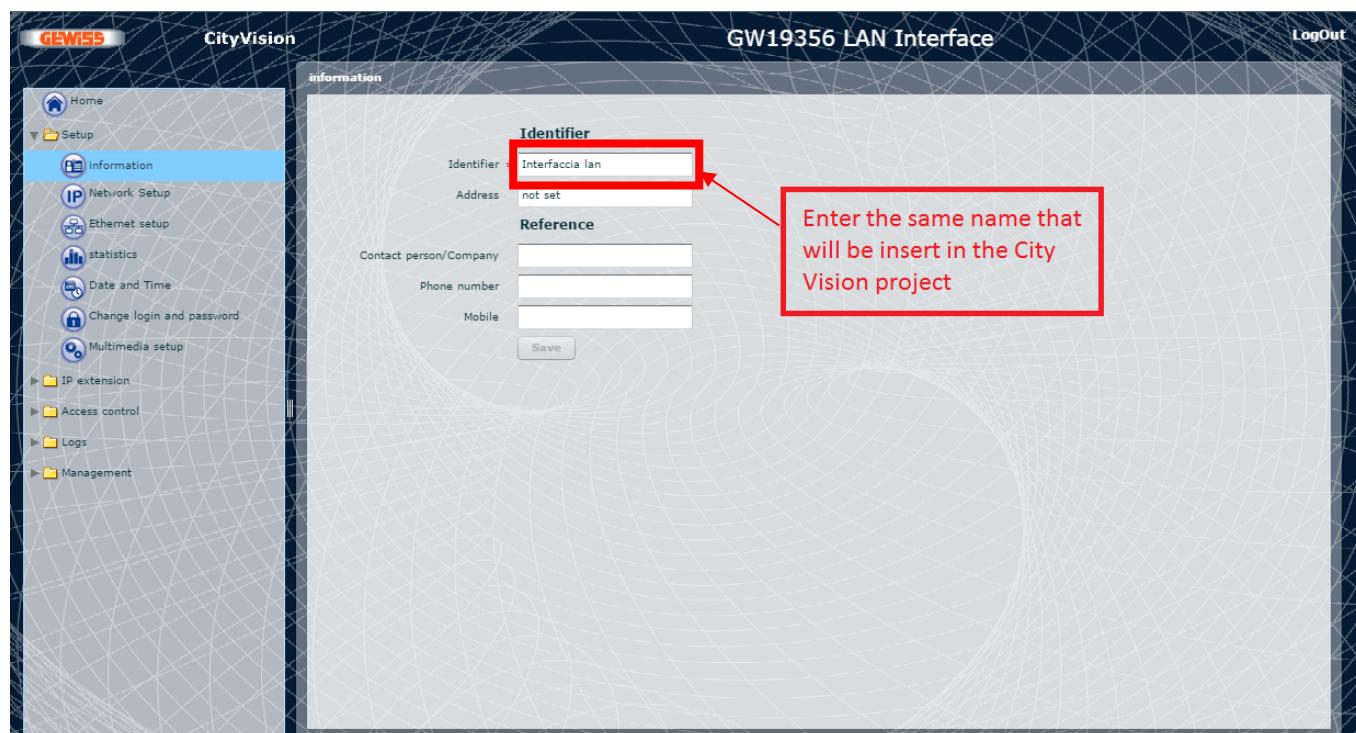


5.3 Setup→Network Setup

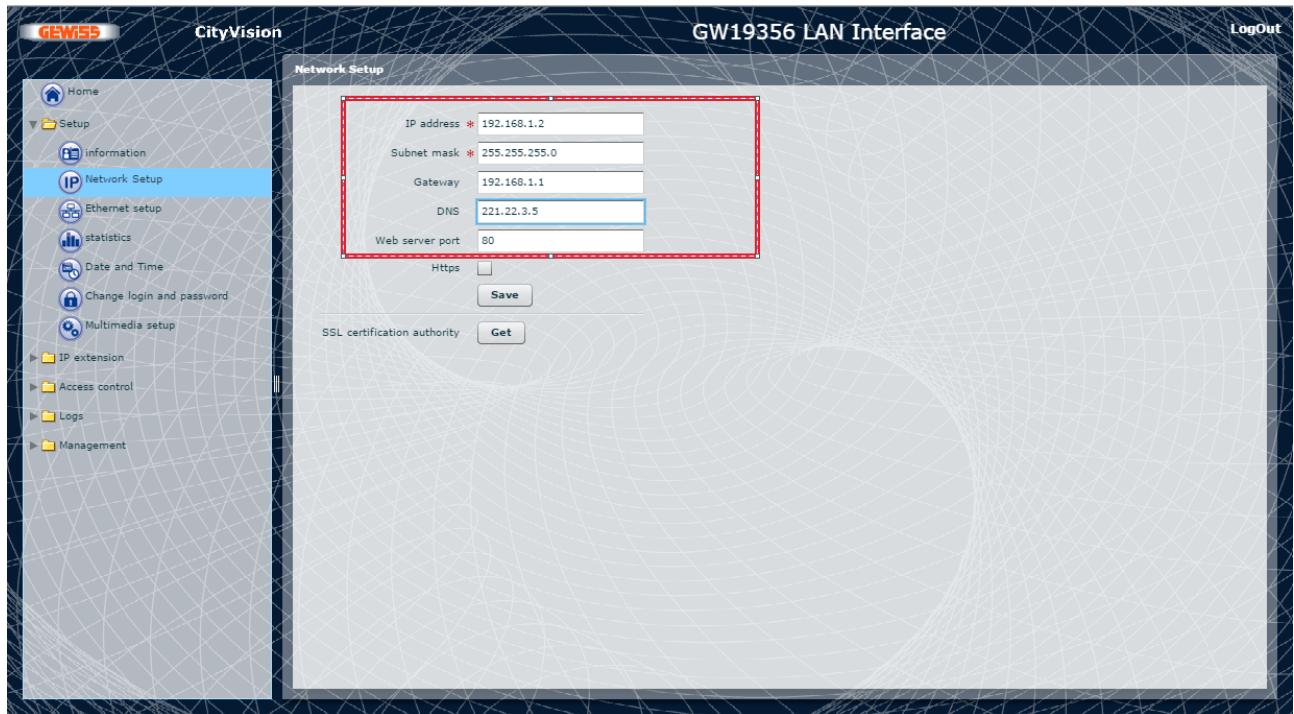

5.4 IP extension → Master/Slave setup

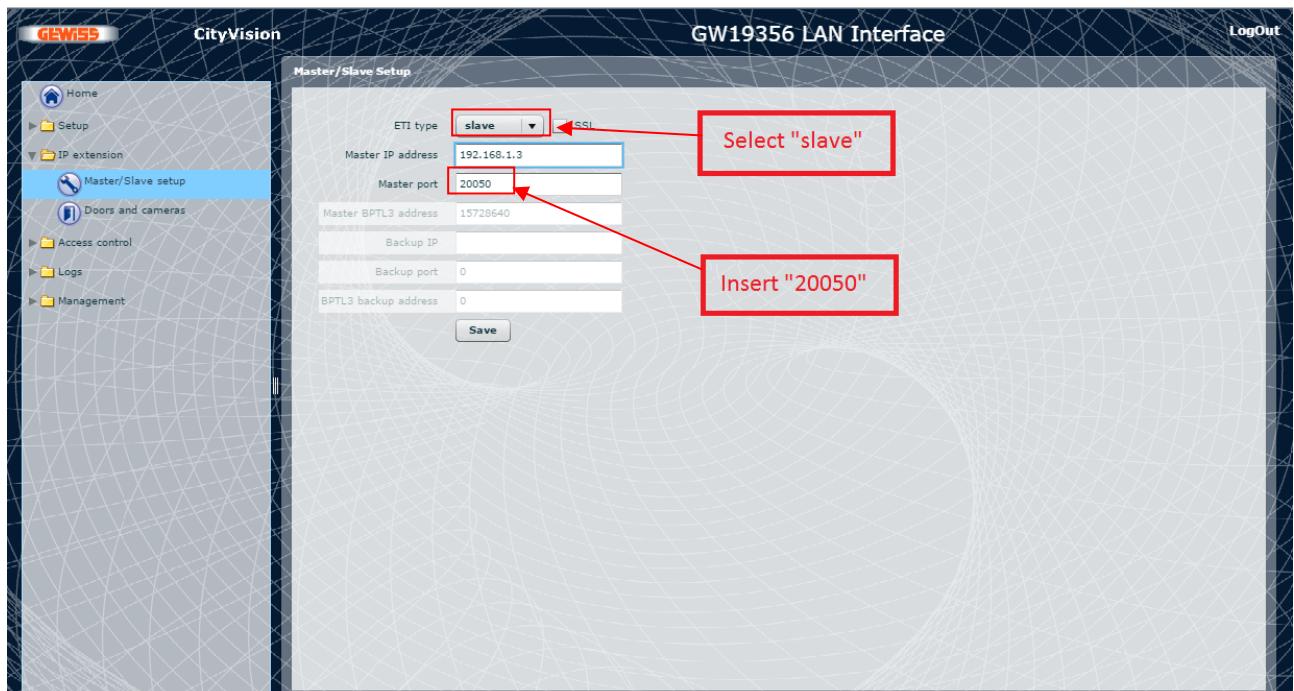


5.5 Management→Software and config

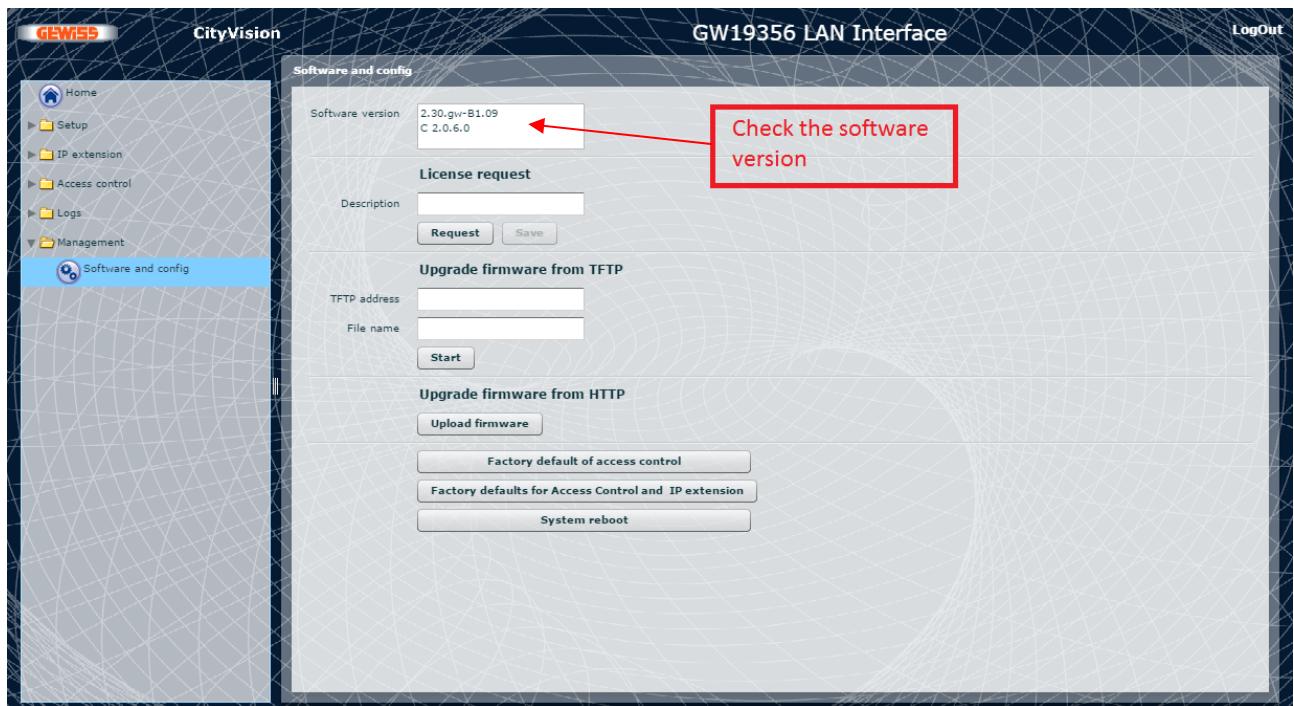


6 Server voip set up


6.1 Connect to Server Voip GW19357

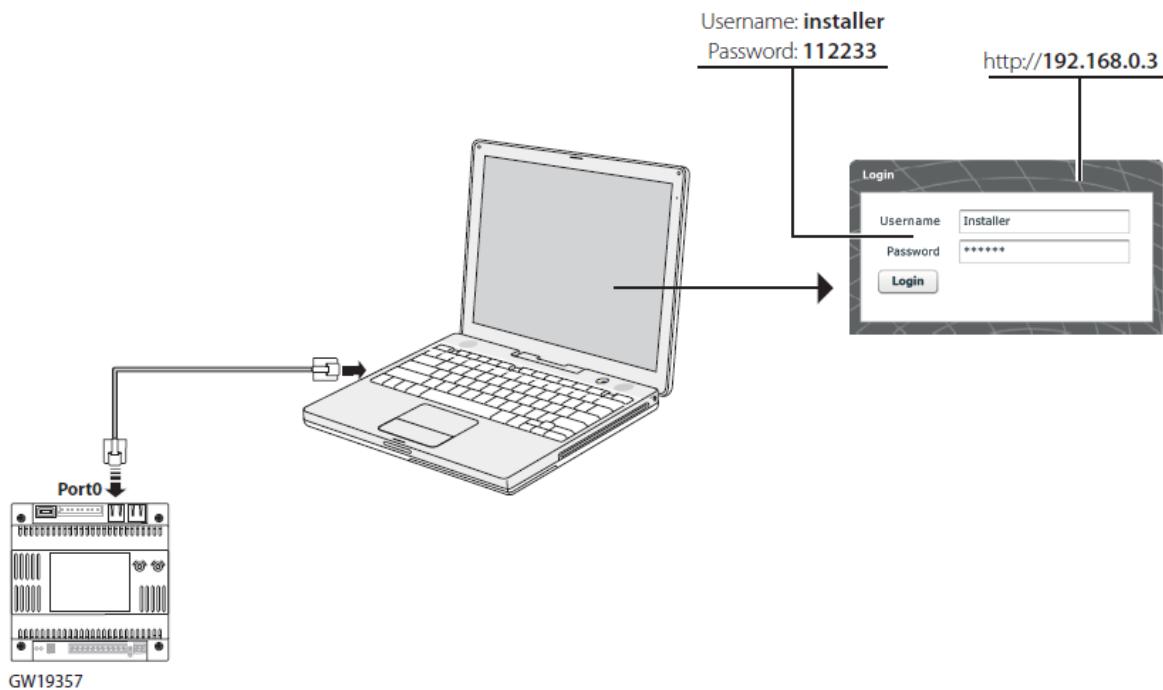

6.2 Management→Software and config (generate file to be sent Gewiss)

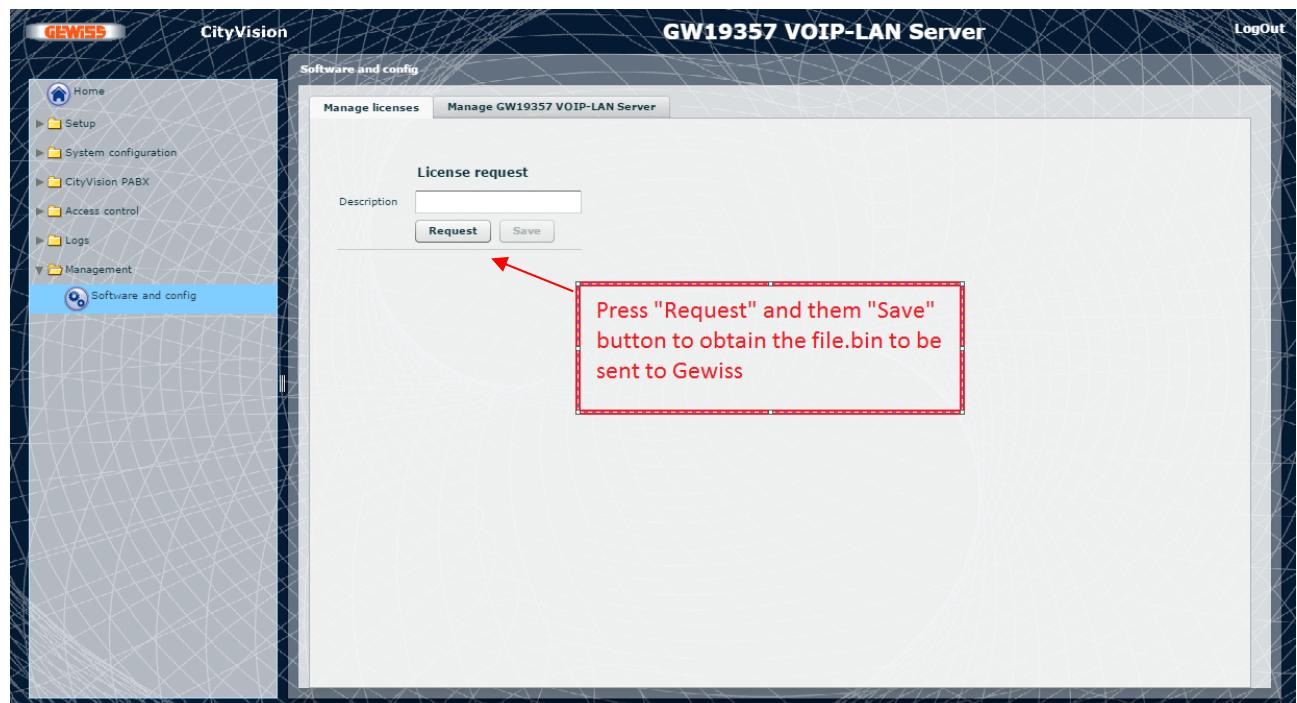


6.3 Setup→Information

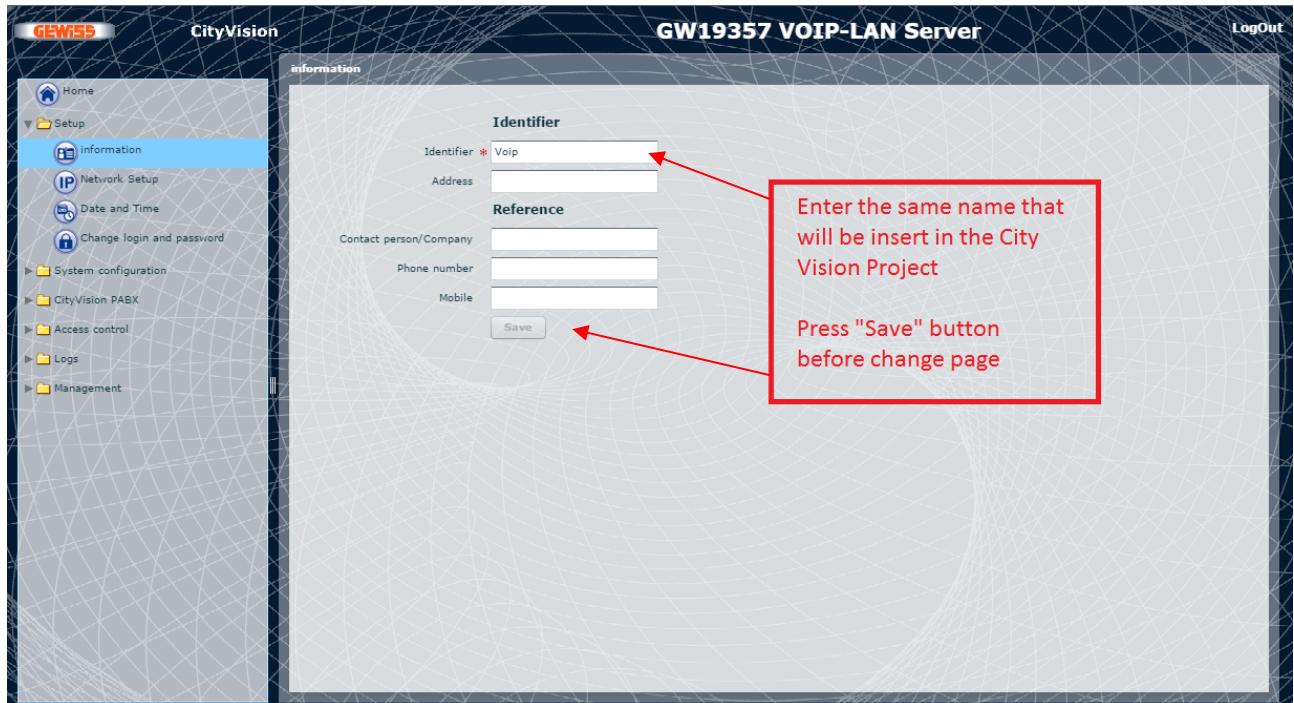


6.4 Setup→Network setup



6.5 System configuration→Master/Slave setup

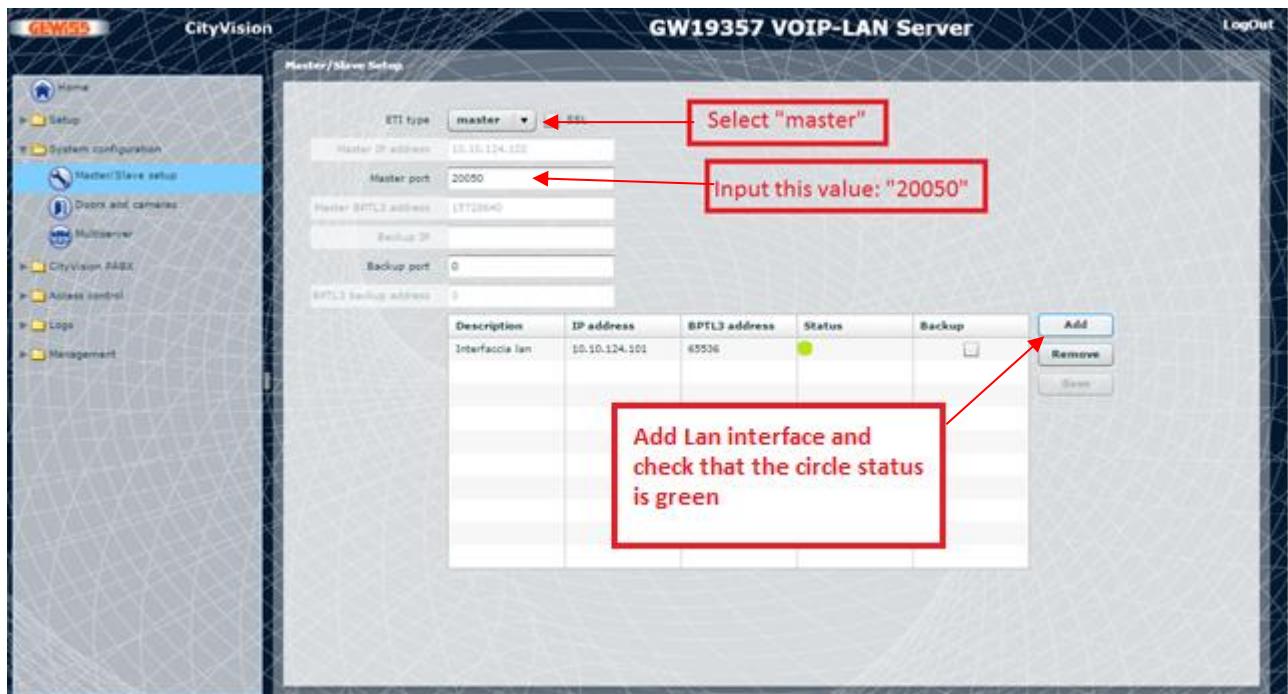

6.6 Accounts

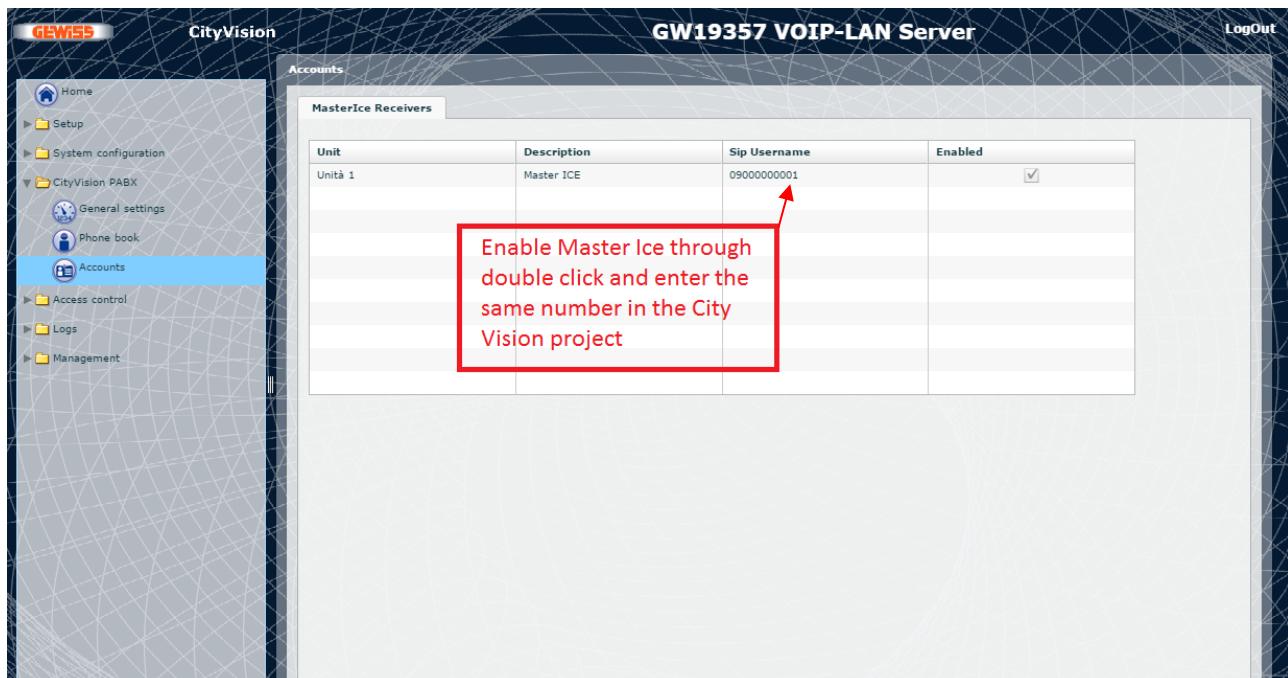

6.7 City Vision PABX→Accounts

The screenshot shows the CityVision web interface with the title "GW19357 VOIP-LAN Server". On the left, there is a navigation sidebar with the following menu items:

- Home
- Setup
- System configuration
- CityVision PABX
 - General settings
 - Phone book
 - Accounts** (highlighted in blue)
- Access control
- Logs
- Management

The main content area is titled "MasterIce Receivers" and contains a table with one row:

Unità 1	Master ICE	0900000001	<input checked="" type="checkbox"/>

Below the table, there are input fields for "Sip Username" (0900000001), "Licence" (AF9DBBCE29872838ACA90E080E2FA3D3), and "Enabled" (checked). A red arrow points from a red box containing the text "Enable Master Ice and insert the license key" to the "Licence" field.

6.8 Software and config

The screenshot shows the CityVision web interface with the title "GW19357 VOIP-LAN Server". On the left, there is a navigation sidebar with the following menu items:


- Home
- Setup
- System configuration
- CityVision PABX
- Access control
- Logs
- Management
 - Software and config** (highlighted in blue)

The main content area is titled "Software and config" and contains a section titled "Manage licenses". It displays the "Software version" as "1.0.1 C 2.0.13.0". A red arrow points from a red box containing the text "Check the software version" to the "Software version" field.

7 Master Ice configuration

Enable the VCT network (control panel) and set the same network Class at the Server Voip


7.1 Enter License key

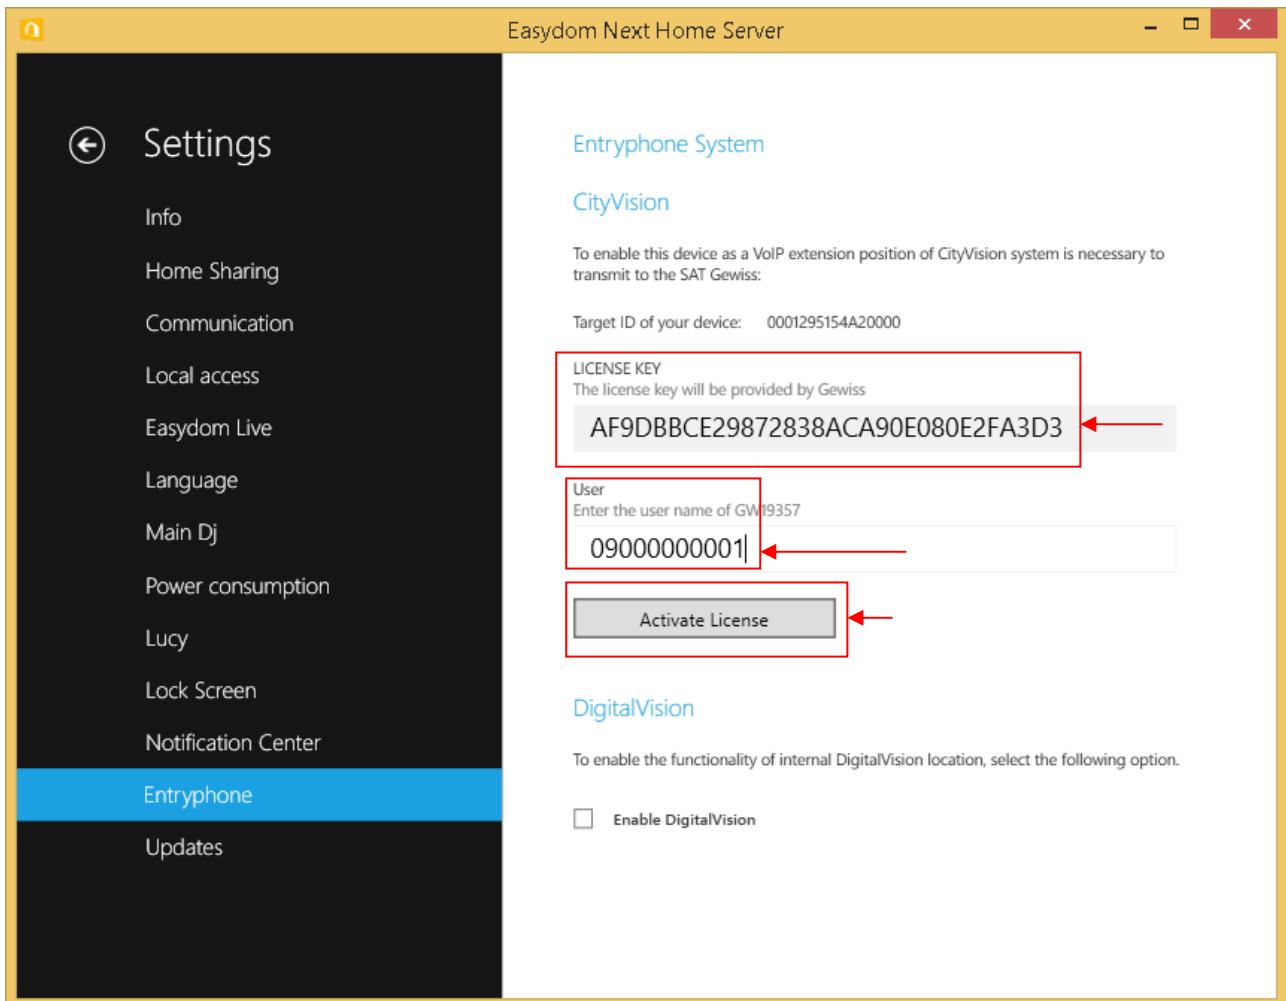

Insert LICENSE KEY, USER (see page 11) and press button “Activate License”.

7.2 Setting parameters

Insert the address IP of Server Voip and check that the address IP of Master Ice is correct.

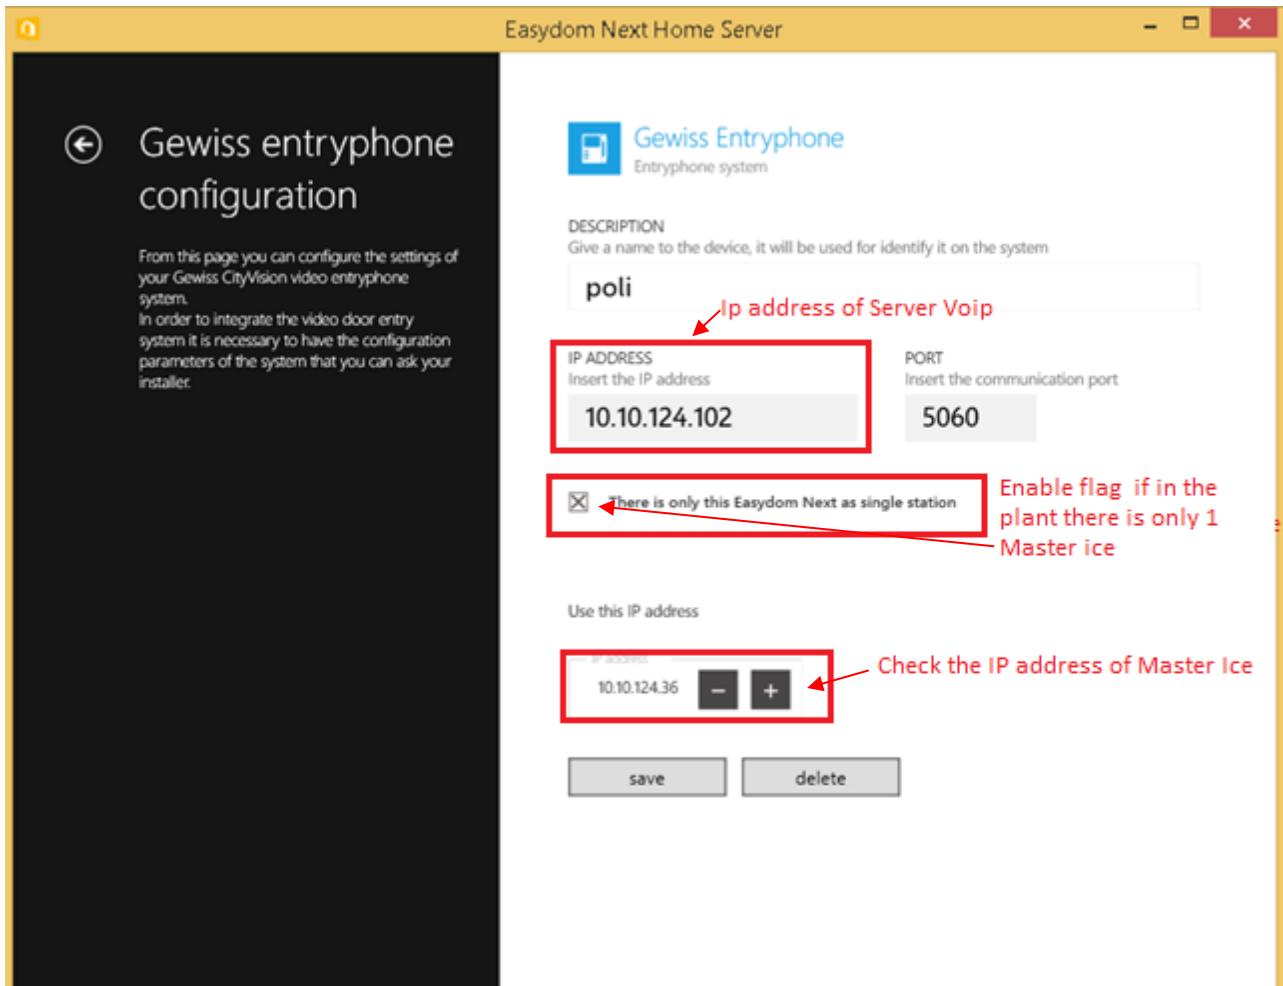

Insert the IP address of Server Voip, enable flag if in the plant there is only one Master Ice, check the IP address of Master Ice and press “save” button, exit to the configuration menu and wait for the automatically restart of Next.

Restart Master Ice, wait 2-3 minutes and check the functionality of the system.

Ai sensi delle Decisioni e delle Direttive Europee applicabili, si informa che il responsabile dell'immissione del prodotto sul mercato Comunitario è:

According to the applicable Decisions and European Directives, the responsible for placing the apparatus on the Community market is:

GEWISS S.p.A. Via A.Volta, 1 IT-24069 Cenate Sotto (BG) Italy Tel: +39 035 946 111 Fax: +39 035 946 270 E-mail: qualitymarks@gewiss.com



+39 035 946 111

8.30 - 12.30 / 14.00 - 18.00
lunedì - venerdì - monday - friday



+39 035 946 260



sat@gewiss.com
www.gewiss.com