

MTX

Sganciatore di apertura MTX 160c - MTX/E 160 - MTX 250


Shunt opening release MTX 160c - MTX/E 160 - MTX 250

Arbeitsstromauslöser MTX 160c - MTX/E 160 - MTX 250


Déclencheur d'ouverture à émission MTX 160c - MTX/E 160 - MTX 250

Relé de apertura MTX 160c - MTX/E 160 - MTX 250


分闸线圈 MTX 160c - MTX/E 160 - MTX 250

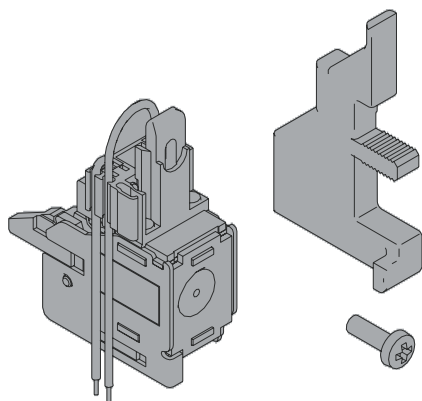


A

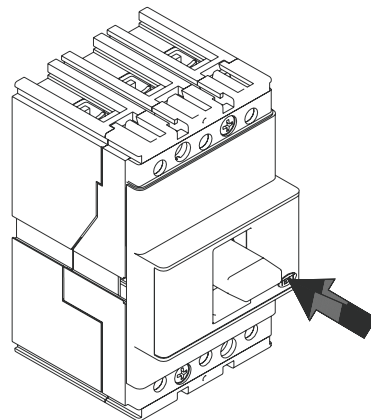


B

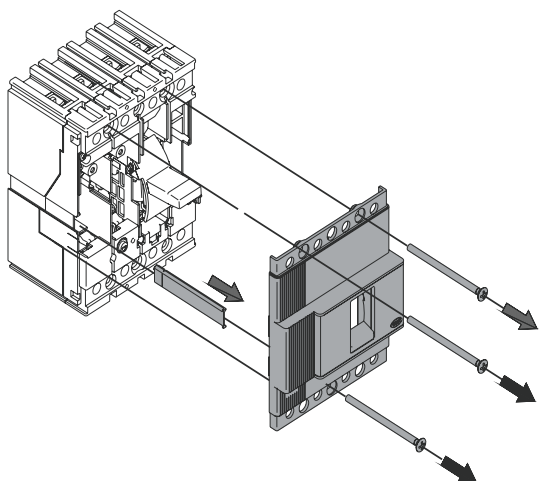



C

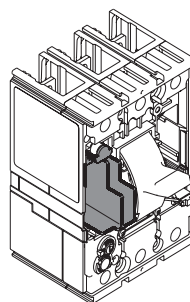


Solo per MTX/E 160
Only for MTX/E 160
Nur für MTX/E 160
Pour MTX/E 160 uniquement
Sólo para MTX/E 160
仅限于 MTX/E 160

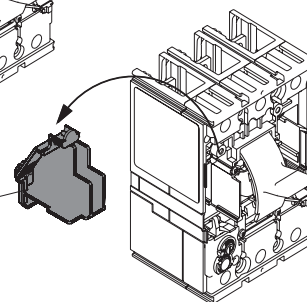


D

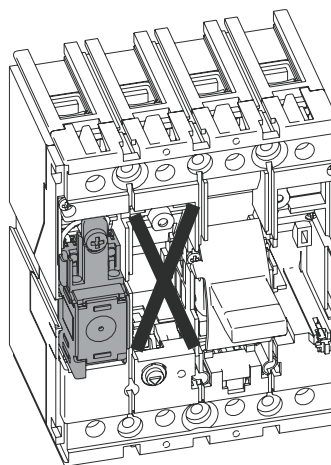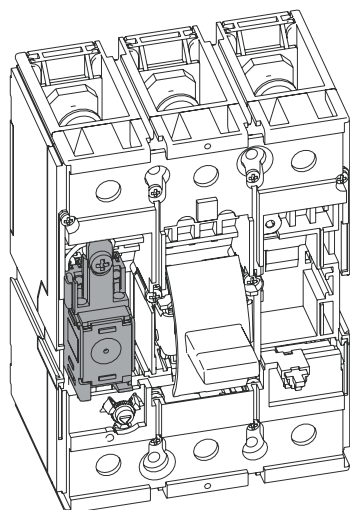

E

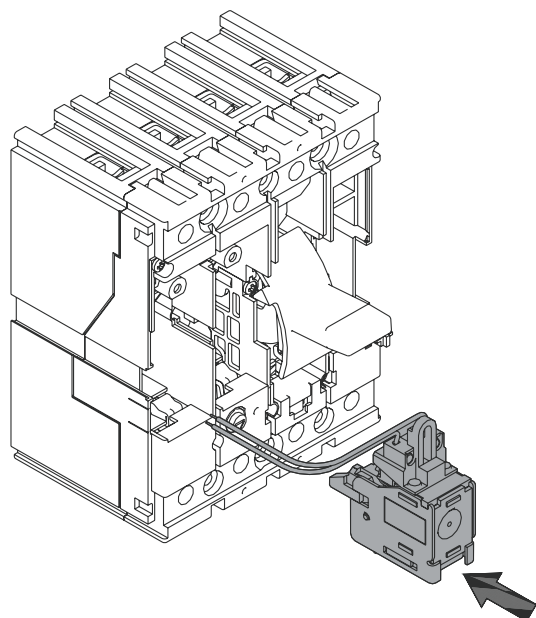


F

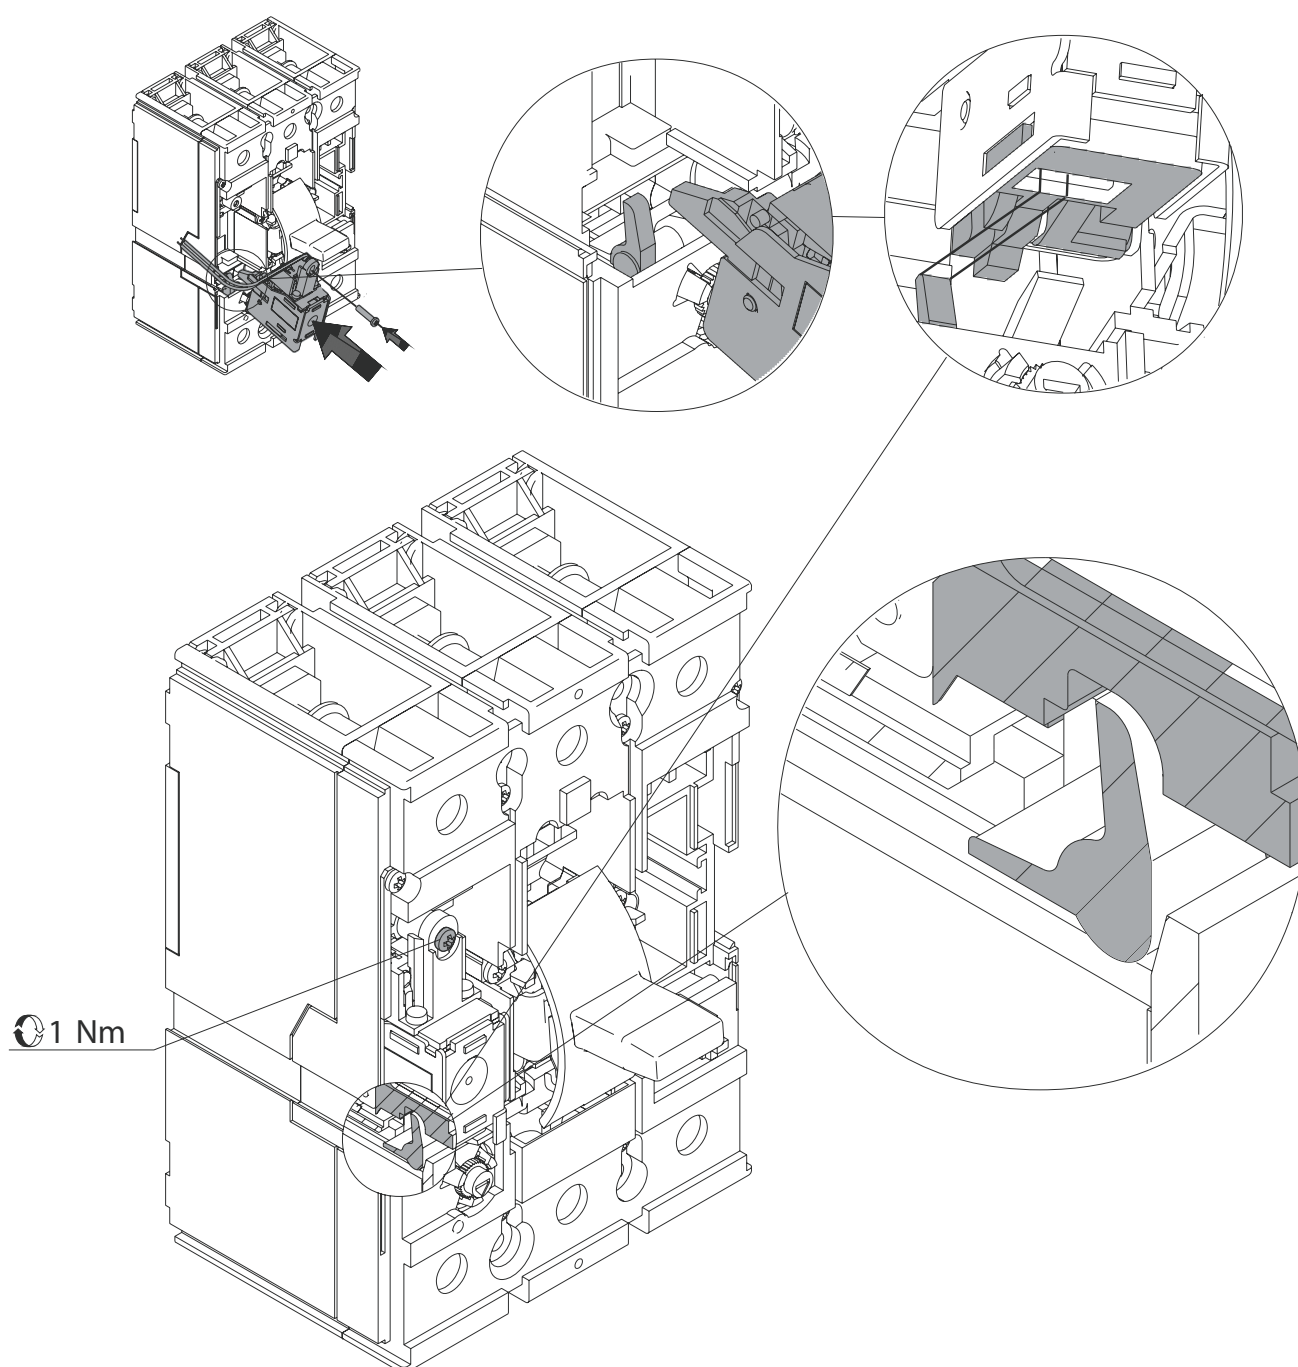


G

MTX/E 160 + SEP/1


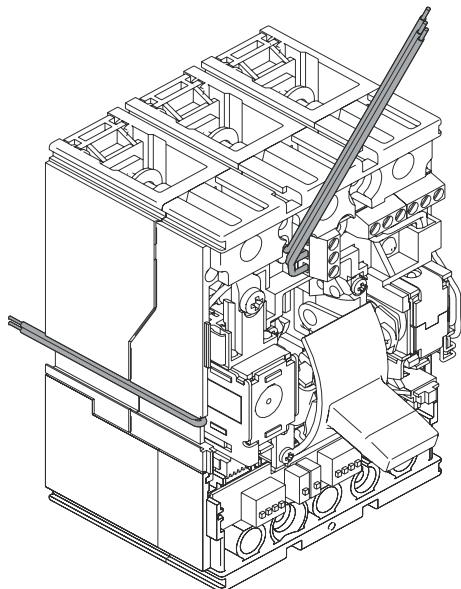


H

MTX/E 160 + SEP/1


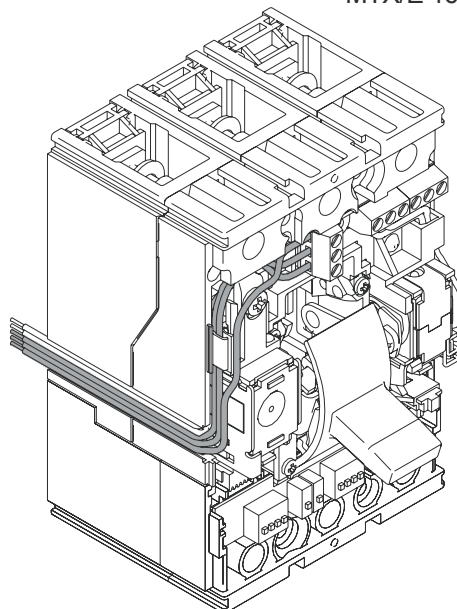


I

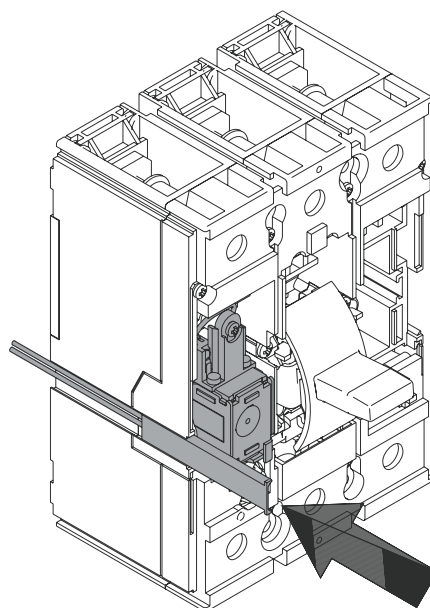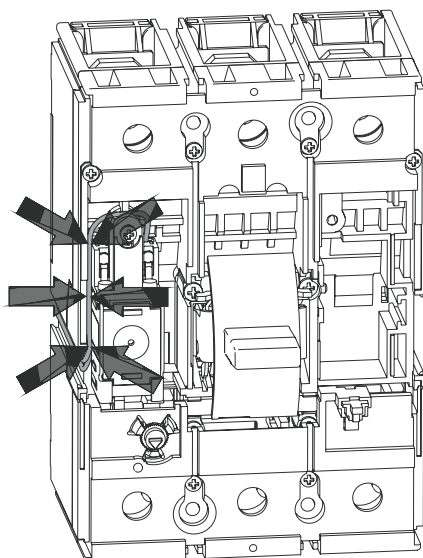

L

MTX 250

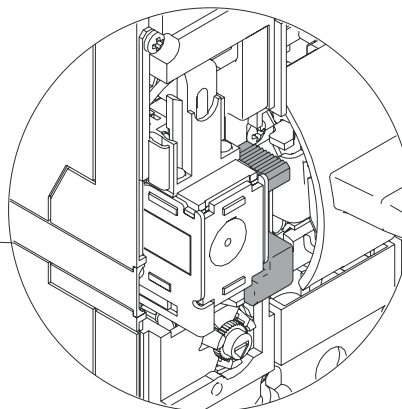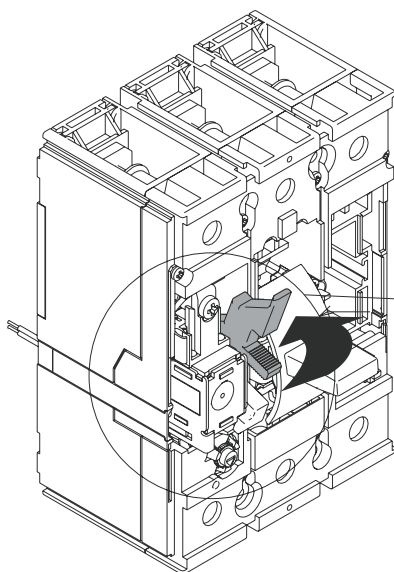

A4	
X1	
XV	
A1	
XV	
X1	
A4	

SO	= Pulsante o contatto per l'apertura dell'interruttore
SO	= Pushbutton or contact for opening the circuit-breaker
SO	= Taster oder Schalter zum Öffnen des Leistungsschalters
SO	= Bouton-poussoir ou contact pour l'ouverture du disjoncteur
SO	= Pulsador o contacto para la apertura del interruptor
SO	= 用于分闸的手动按钮或触头

